



MARQUE : OKOIA
REFERENCE : HANDY 5
CODIC : 4189442



NOTICE
↓



PERSONAL SCALE

Model: Handy5



INSTRUCTION MANUAL

WARNINGS

- ❖ This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.
- ❖ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ❖ The battery must be removed from the appliance before it is scrapped.
- ❖ The battery is to be disposed of safely.
- ❖ Different types of batteries or new and used batteries are not to be mixed.
- ❖ Batteries of the same or equivalent type as recommended are to be used.
- ❖ Batteries are to be inserted with the correct polarity.
- ❖ Exhausted batteries are to be removed from the product.
- ❖ Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.
- ❖ The batteries (batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

IMPORTANT SAFETY INSTRUCTIONS


- Always use the scale on a hard, very flat surface. DO NOT use on carpet.
- DO NOT strike, shake or drop the scale.
- DO NOT step on the scale with wet feet, glass surface could be slippery.
- Keep the scale dry.
- Keep standing still during the course of weighing.
- Avoid breaking the scale by striking the glass with a sharp object or by dropping. Store your scale horizontally; do not store it on its side. The batteries should only be replaced by adults. Do not allow children to use the appliance unless the battery cover is attached.
- Failure to properly align the battery polarity correctly can cause damage to the product and can cause a fire hazard.

The scale uses two 1.5V AAA batteries (supplied). These batteries are located internally and readily accessible.

Remove the battery cover on the bottom of the scale to remove the batteries. The batteries must be disposed of at your local recycling point.

Replacing the battery

1. Remove the battery cover.
2. Insert the batteries into the battery compartment observing the correct polarity.
3. Attach the battery cover.

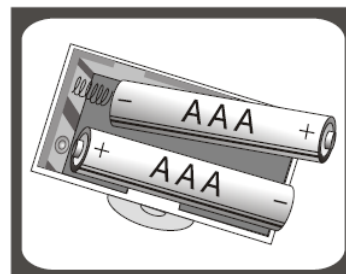


OPERATION

1. Place the scale on a hard and very flat surface. Avoid carpet or soft surface.
2. After installing the batteries, the display will show "888.8" briefly then show "0.0".



3. Select the weight unit kg or lb using the unit switch on the back of the scale.

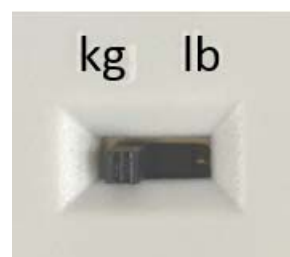

4. Step on the scale and stand still.
 - You will hear a beep and the scale display will flash to indicate that the reading is accepted.
5. If there is no operation for a while, the scale will automatically switch off.

Warning indicators

- When the display shows "C", please step the scale off then step it on again to measure weight.
- When the display shows "Lo", please replace the battery.
- When the scale is overloaded, the display will show "Err". Please step off to avoid damage.

SPECIFICATIONS

Maximum weight: 150 kg / 330lb

Division: 100g / 0.2lb

CLEANING AND MAINTENANCE

Clean the scale with a slightly damp cloth.

DO NOT immerse the scale in water.

Never use abrasive or chemical cleaning agents.

Keep it in a dry and clean place.

If there is error on the display or the scale will not turn off the scale for a long period of time, please remove the batteries for about 3 seconds, then install them again to correct error. If you cannot resolve the problem, please contact the after-sales service for consultation.

DISPOSAL



As a responsible retailer we care about the environment.

As such we urge you to follow the correct disposal procedure for the appliance, packaging materials and if applicable, batteries. This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this appliance and its packaging according to local laws and regulations.

Because this appliance contains electronic components and may contain batteries, the appliance and its accessories must be disposed of separately from household waste when the appliance reaches its end of life.

Contact your local authority to learn about disposal and recycling.

The appliance and if applicable, batteries should be taken to your local collection point for recycling. Some collection points accept appliance free of charge.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

Darty Holdings SAS © 14 route d'Aulnay 93140 Bondy, France 04 / 03 /2016