





MARQUE: DCYBEL
REFERENCE: EARBUDDY BLACK
CODiC: 4246195

NOTICE
↓

Earbuddy button function instruction sheet

尺寸: 35*56mm

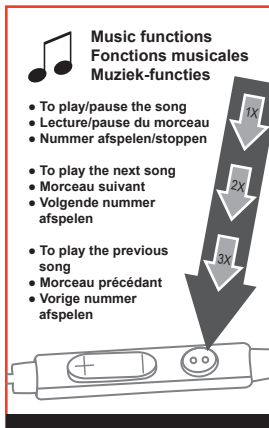

 **Music functions**
Fonctions musicales
Muziek-functies

- To play/pause the song
- Lecture/pause du morceau
- Nummer afspelen/stoppen

1X


- To play the next song
- Morceau suivant
- Volgende nummer afspelen


2X

- To play the previous song
- Morceau précédent
- Vorige nummer afspelen

3X

The diagram shows a side view of the Earbuddy button with three arrows pointing to the play/pause button. The first arrow is labeled '1X' and points to the play/pause button. The second arrow is labeled '2X' and points to the next button. The third arrow is labeled '3X' and points to the previous button.

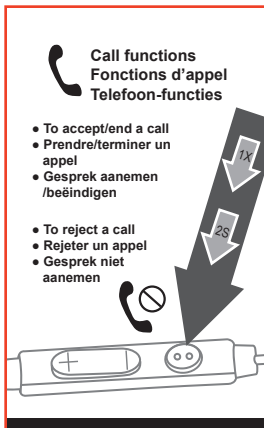

 **Call functions**
Fonctions d'appel
Telefoon-functies

- To accept/end a call
- Prendre/terminer un appel
- Gesprek aanemen /beëindigen

1X

- To reject a call
- Rejeter un appel
- Gesprek niet aanemen

2S

The diagram shows a side view of the Earbuddy button with two arrows pointing to the call button. The first arrow is labeled '1X' and points to the call button. The second arrow is labeled '2S' and points to the call button with a 'no' symbol (a circle with a diagonal line) over it.